


SPEAKER ON A STICK.COM

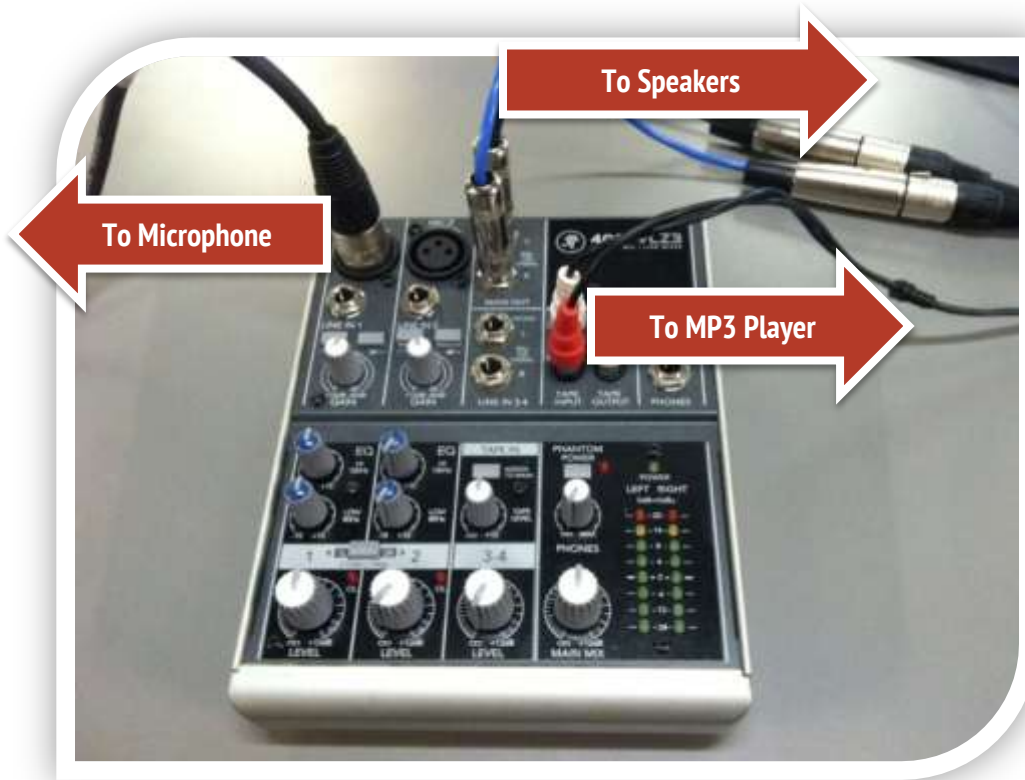

QUICK INSTRUCTIONS

1. Connect cables as shown
2. Set **MIC** channel knobs to 12 o'clock
3. Speak into mic and slowly increase the **MAIN MIX** knob
4. Push ASSIGN TO MAIN button "in"
5. Play music and slowly increase **TAPE LEVEL** knob
6. Enjoy!

Mixer wiring for the **Classic**



Speaker wiring "**MIXER OUTPUT** connects to **INPUT**"