

SPEAKER ON A STICK.COM



QUICK INSTRUCTIONS

1. Connect cables as shown
2. Set **MIC** channel knobs to 12 o'clock
3. Speak into mic and slowly increase the **MAIN MIX** knob
4. Push **ASSIGN TO MAIN** button "in"
5. Play music and slowly increase **TAPE LEVEL** knob
6. Enjoy!

Mixer wiring for the **Classic, Gig, and DJ** packages



Speaker wiring "**MIXER OUTPUT** connects to **INPUT**"



Sub Wiring "**MIXER OUTPUT** to **FULL RANGE INPUT**, **HIGH PASS OUTPUT** connects to speaker **INPUT**"