


The DJ

What's Included

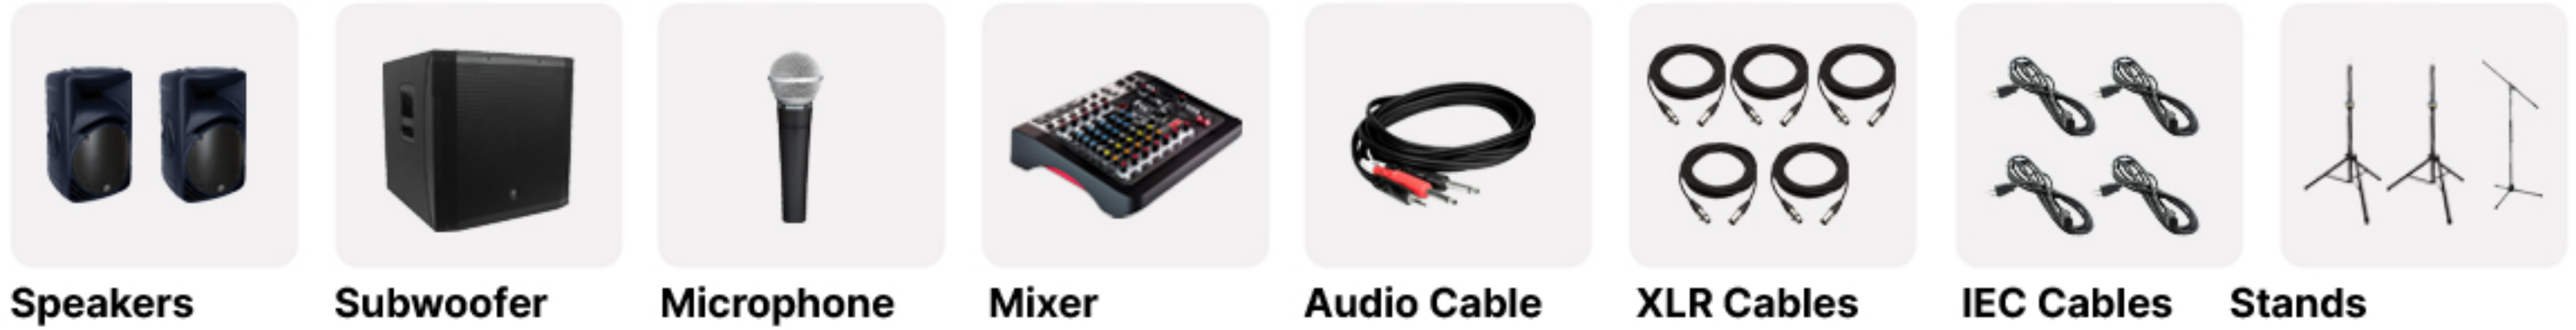

Subwoofer Set-Up Instructions



Keep these knobs set to 'U', or straight up.

This is where you plug from 'L MAIN OUT' on the mixer using an XLR Cable.

& this is where you plug from 'R MAIN OUT' on the mixer using an XLR Cable.

This is where you plug into the LEFT speaker using an XLR Cable.

& this is where you plug into the RIGHT speaker using an XLR Cable.

This is where you plug in the IEC Cable.

Speaker Set-Up Instructions



Keep this at 'OFF'.

This is where you plug in the IEC Cable.

Keep this knob set to 'U', or straight up.

This is where you plug in from the Sub.

Questions?

- Visit our website at www.speakeronastick.com. Click on the 'How To' page and review our 'Troubleshooting' section.
- Reach us at (727) 444-0290 if you rented from our Clearwater, FL location or (616) 988-9671 if you rented from our Grand Rapids, MI location. If your call is outside our business hours, you **must** leave a voicemail for us to be notified that you've called. We will receive the notification on our cell phones. Once we're notified, we'll return your call as soon as possible.
- Send us an email at info@speakeronastick.com.